


NENAB®

GL-840

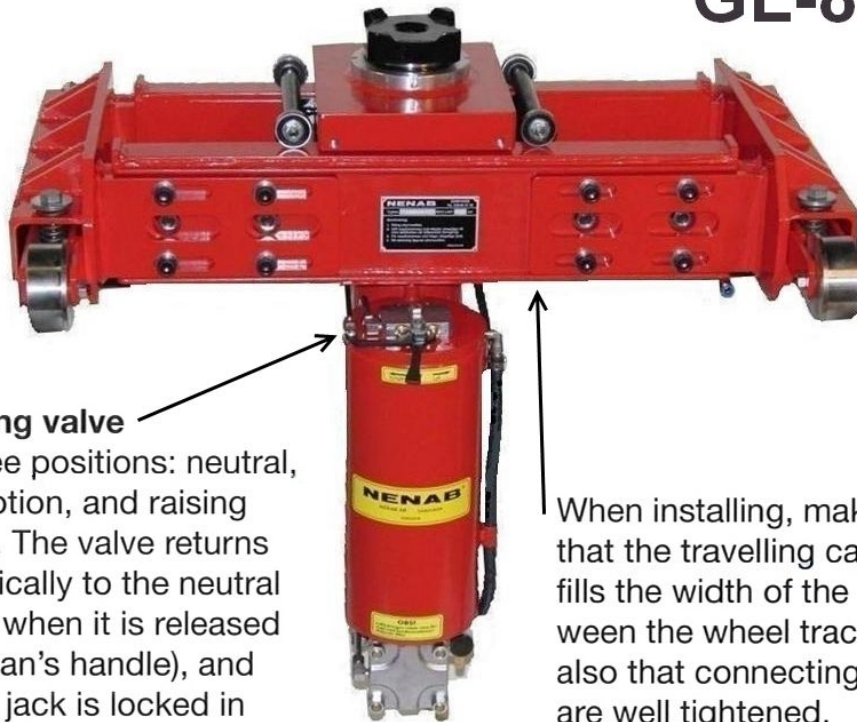

Operating valve

with three positions: neutral, rapid motion, and raising position. The valve returns automatically to the neutral position when it is released (dead-man's handle), and then the jack is locked in the existing height position.

When installing, make sure that the travelling carriage fills the width of the pit between the wheel tracks, and also that connecting bolts are well tightened.

Before putting the jack into operation, make sure that the wheel tracks can easily withstand a maximum load.

When raising, make sure that the maximum load of **40 tonnes** is not exceeded, and that the jack is positioned in such a way that there is no risk of the load sliding off.

Type designation, GL-840

Lifting force, 40 tonnes at 8 bar

Natural weight, including travelling carriage, approx 280 kg

Noise level not higher than 70dB(A)

Refer to drawing number 3-2153 for maintenance instructions.